

Our Four-Way Lamps light up on the base and the top!

Rotate the turn-key knob once to turn on the bottom light in the lamp. Turn it again to turn on the top and turn off the bottom light. Turn the knob for the third time and both lights will come on. The fourth turn will turn both lights off. These lamps include washer-top shades.

You will need one regular bulb for the top socket and one candelabra base bulb for the bottom of the lamp.



CTW HOME COLLECTION

BY COLONIAL TIN WORKS, INC.